


TOYOTA 3S-GTE DISTRIBUTOR



LOOKING AT PLUG ON DISTRIBUTOR

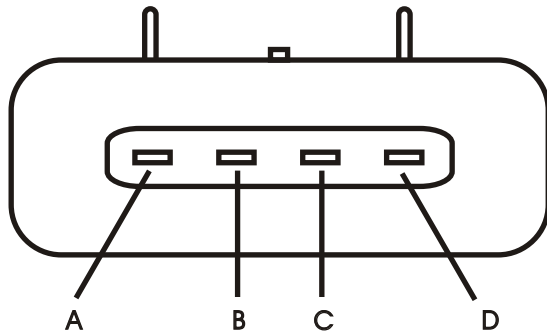

TOYOTA	HALTECH
DISTRIBUTOR PLUG	TRIGGER INPUT PLUG J16
A (0V)	PIN C & D (INPUT A & INPUT B)
B (1 TOOTH SIGNAL)	PIN E HOME
C	N/C
D (24 TOOTH SIGNAL)	PIN B TRIGGER

File Maps Setup Options **MAIN SETUP** OFFLINE MODE
Serial No. E6K-xxxx Copyright (c) INVENT 1988-2000

<u>Engine</u>	Cylinders	:	4
	Load Sensing by	:	Manifold
	Map Sensor	:	3 BAR
	RPM Limits : Primary	:	6800
<u>Settings</u>	RPM Limit Type	:	Fuel Cut
	Units	:	US
	RPM Mode	:	10500 rpm
	Road Speed Value	:	12750
	System Mode	:	Advanced

↑ ↓ to move. ↑ ↓ to move.
<Tab> to Change. <Enter> or ↑↓ when finished.

File Maps Setup Options **FUEL SETUP** OFFLINE MODE
Copyright (c) INVENT 1988-2000

Ign / By	:	1
Decel Cut-off	:	Enable
Decel Cut-off RPM	:	1700
Injection Mode	:	Batch Firing
Post Start Temp. Limit	:	131 Above
Post Start Time Limit	:	1
Staging Bar Number	:	10
Zero Throttle Map	:	Disable
Full Throttle Map	:	Disable
Full Throttle Threshold	:	95
Barometric Lock	:	Enabled
Barometric Pressure Lock at	:	1013 mBars
Disable Injector Outputs:	:	No
Throt.Pump Dead Band	:	2

↑ ↓ to move. ↑ ↓ to move.
<Tab> or <Shift><Tab> to Change. <Enter> or ↑↓ when finished.

File Maps Setup Options **IGNITION SETUP** OFFLINE MODE
Copyright (c) INVENT 1988-2000

Trigger Input	:	Int. Reluctor	Home Input	:	Int. Reluctor
Trigger Gain	:	2	Home Gain	:	2
Trigger Mode	:	Adaptive			
Trigger Angle - °BTDC	:	65			
Trigger Type	:	Multitooth	Number of Teeth	:	24
			Tooth Offset	:	5
Spark Mode	:	Distributor			
Engine Type	:	Piston			
Output Type	:	Constant Charge			
Coil Charge Time (mS)	:	3.0			
Output Edge	:	Falling			

↑ ↓ to move. ↑ ↓ to move.
<Tab> or <Shift><Tab> to Change. <Enter> or ↑↓ when finished.